Airbag Systems, only for cars with green illuminated instrument cluster

From September 1997

Deviate relay location and fuseplacements as well as the locations of multiple connectors see section "component locations".

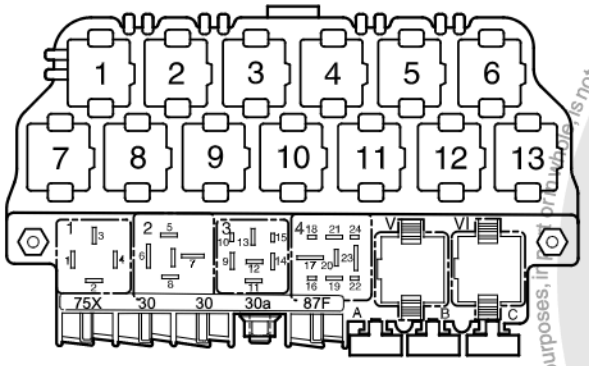

3B–20676

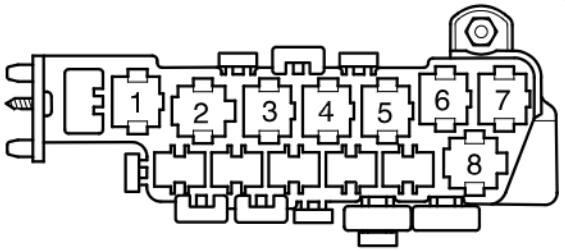

3B–20515

Fuse colors

30 A - green
25 A - white
20 A - yellow
15 A - blue
10 A - red
7,5 A - brown
5 A - beige

© Volkswagen AG, Wolfsburg. It is not permitted unless authorised by Volkswagen AG, not for public or commercial purposes, in part or in whole. Volkswagen does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Volkswagen AG. Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Volkswagen AG.

Airbag control module, igniter for side airbag, crash sensor for side airbag

G179	Crash sensor for side airbag, driver's side
G180	Crash sensor for side airbag, passenger side
J234	Airbag Control Module, behind console
N199	Igniter for side airbag, driver's side
N200	Igniter for side airbag, passenger side
T2e	Double Connector
T2f	Double Connector
T2g	Double Connector, below driver's seat
T2h	Double Connector, below passenger's seat
T6a	6-Pin Connector
T6b	6-Pin Connector
T34	34-Pin Connector, on Airbag Control Module
32	Ground connection, behind instrument panel, left
43	Ground connection, on right A-pillar, lower part
109	Ground connection, in airbag wiring harness

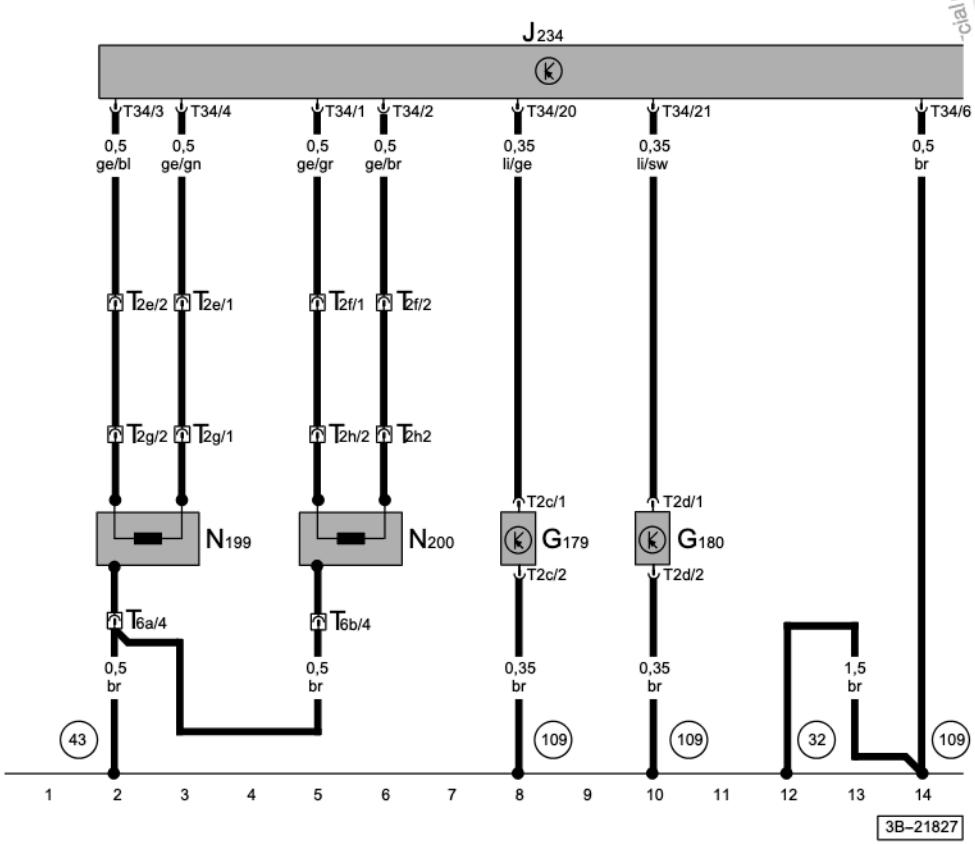

ws	=	white
sw	=	black
ro	=	red
br	=	brown
gn	=	green
bl	=	blue
gr	=	grey
li	=	lilac
ge	=	yellow
or	=	orange
rs	=	pink

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Volkswagen AG. Volkswagen AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Volkswagen AG.

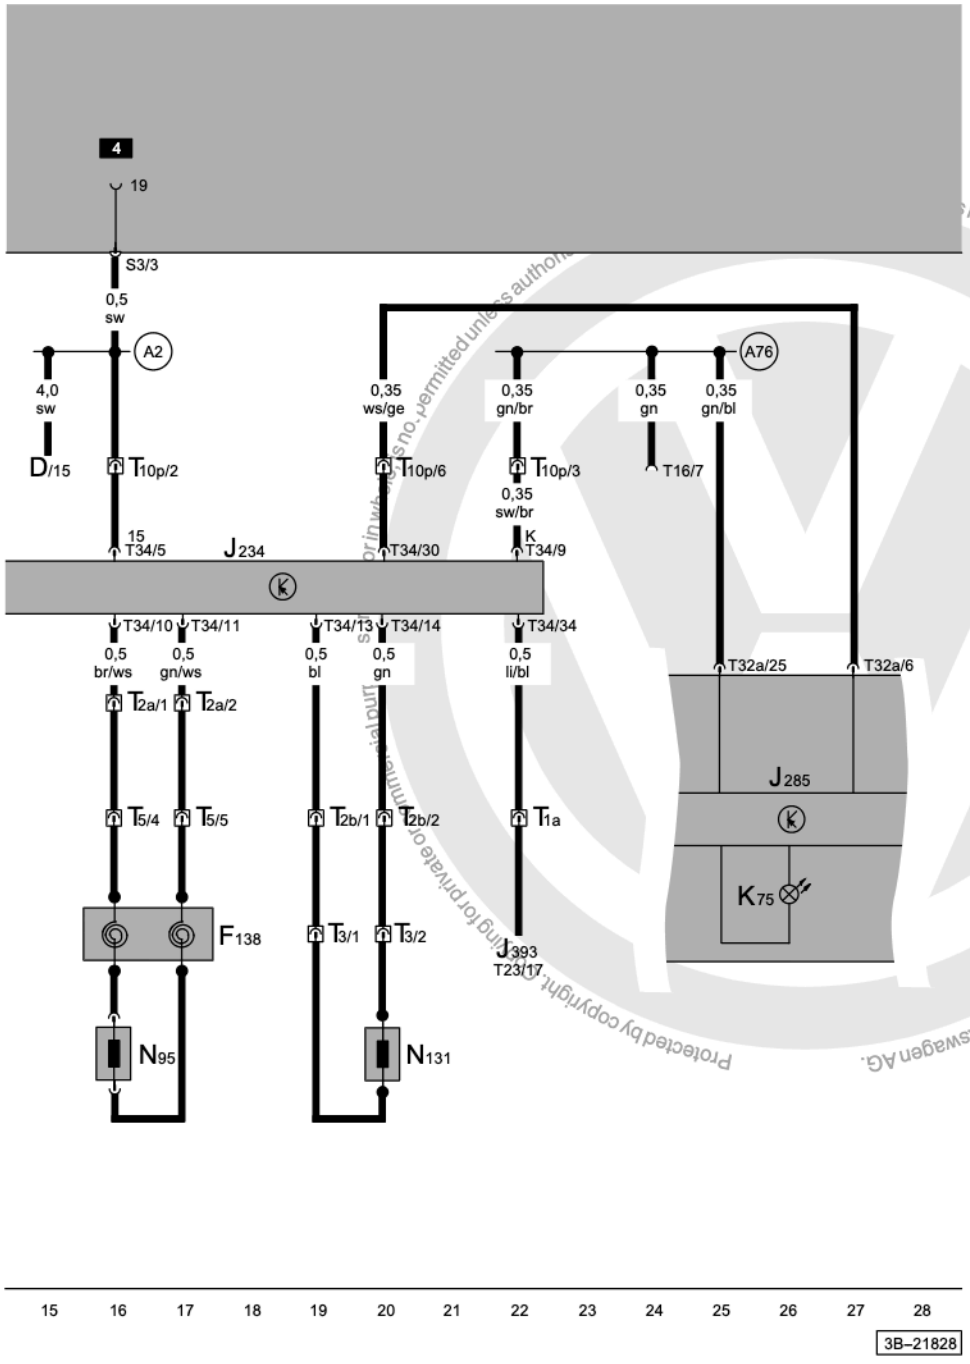

Airbag control module, driver's side airbag igniter, passenger's side airbag igniter 1, airbag malfunction indicator lamp (MIL)

D	Ignition/Starter Switch
F138	Airbag Spiral Spring/Return Spring With Slip Ring
J234	Airbag Control Module, behind console
J285	Control module with indicator unit in instrument panel insert
J393	Central control module for comfort system
K75	Airbag Malfunction Indicator Lamp (MIL)
N95	Driver's Side Airbag Igniter
N131	Passenger's Side Airbag Igniter 1
T1a	Single Connector, black, connector station A-pillar, right
T2a	Double Connector, yellow, connector station A-pillar, left
T2b	Double Connector, yellow, connector station A-pillar, right
T3	3-Pin Connector, behind instrument panel, right
T5	5-Pin Connector, black, behind steering column switch cover
T10p	10-Pin Connector, green, connector station A-pillar, right
T16	16-Pin Connector, On Board Diagnostic (OBD), below instrument panel, left
T23	23-Pin Connector, on central control module for comfort system
T32a	32-Pin Connector, blue, on instrument cluster
T34	34-Pin Connector, on airbag control module
A2	plus connection (15), in instrument panel wiring harness
A76	Connector (K-diagnosis wire) in instrument panel wiring harness

ws	=	white
sw	=	black
ro	=	red
br	=	brown
gn	=	green
bl	=	blue
gr	=	grey
li	=	lilac
ge	=	yellow
or	=	orange
rs	=	pink

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Volkswagen AG. Volkswagen AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Volkswagen AG.